



Keeping your chute together since 1999

North America's multi-family waste equipment specialists



Chute happens

How To Measure Chute Doors for Replacement

Do you need to replace an existing door and are not sure what size to order?

Simply open the chute door and measure the width and height of the interior opening, and exterior opening. Take a few pictures, and email to info@canamwaste or attach to our online form.

Open door and measure the width and height of the door FRAME



BACK OF DOOR